

Water Pro BP100 Series Installation/Operation Manual



For the following models:

BP100 with Fixed Heater
BP100 with Remote Heater
BP100 with Low Flow Heater



FIXED HEATER



REMOTE HEATER



LOW FLOW HEATER*

Optional Spaside Controls:



TP200



TP500



TP600



ST2



ST MINI

Contents

Important Safety Instructions.....	4-5
Electrical Installation.....	6-9
Pump Cord Installation.....	10
Spa-Side Installation.....	11
WiFi Module Installation Kit.....	12
Circuit Board Configurations.....	13
Heater Configurations.....	14-15
Circuit Board Wiring Diagram.....	16
System Setup Options.....	17
Setup Number Programming.....	18-24
System Start-Up.....	25
Operational Considerations.....	26
System Functions / Features.....	27-28
Plug Pin-Outs/Sensor Replacement.....	29
TroubleShooting	30-31
Data Label/Warranty Info.....	32

IMPORTANT SAFETY INSTRUCTIONS

- ! **DANGER** To reduce the risk of injury, do not permit children to use this product unless they are closely supervised at all times.
- ! **WARNING - RISK OF CHILD DROWNING.** Extreme caution must be exercised to prevent unauthorized access by children. To avoid accidents, ensure that children cannot use a spa or hot tub unless they are supervised at all times.
- ! **DANGER** To reduce the risk of injury to persons, do not remove suction fittings.
- ▶ Spa location must accommodate sufficient drainage of water around the base of the structure, as well as the power source compartment.
- ▶ Prolonged immersion in water that is warmer than normal body temperature can result in a dangerous condition known as **HYPERTHERMIA**. The causes, symptoms, and effects of hyperthermia may be described as follows: Hyperthermia occurs when the internal temperature of the body reaches a level several degrees above the normal body temperature of 98.6°F. The symptoms of hyperthermia include dizziness, fainting, drowsiness, lethargy, and an increase in the internal temperature of the body. The effects of hyperthermia include (1) unawareness of impending hazard, (2) failure to perceive heat, (3) failure to recognize the need to exit spa, (4) physical inability to exit spa, (5) fetal damage in pregnant women, (6) unconsciousness resulting in danger of drowning. **WARNING** The use of alcohol, drugs or medication can greatly increase the risk of fatal hyperthermia in hot tubs and spas.
- ! **DANGER - RISK OF ELECTRICAL SHOCK.**

A spa may be installed within 5 feet of metal surfaces if each metal surface is permanently connected by a solid copper conductor attached to the wire connector on the terminal box . Refer to NEC and local codes in effect at the time of installation.)
- ▶ A bonding lug is provided on the control box to permit connection of a solid copper bonding conductor between this point and any equipment, metal enclosures of electrical equipment, metal water pipe, or conduit within 5 feet (1.5m) of the unit as needed to comply with local requirements.
- ▶ Bond accessible metal to the dedicated connector on the equipment grounding bus, bond the equipment ground bus to the local common bonding grid as part of the installation in the form of (1) a reinforced concrete slab for support, (2) a ground plate provided beneath the hot tub or spa, or (3) a permanent ground connection that is acceptable to the local inspection authority.
- ! **DANGER RISK OF ELECTRICAL SHOCK.** Do not permit any electrical appliance, such as a light, telephone, radio, or television, within 5 feet (1.5m) of a spa or hot tub.

To reduce the risk of injury:

- ▶ The water in a spa or hot tub should never exceed 104°F (40°C). Water temperatures between 100°F (38°C) and 104°F (40°C) are considered safe for a healthy adult. Lower water temperatures are recommended for extended use (exceeding 10-15 minutes) and for young children.
- ▶ Excessive water temperatures have a high potential for causing fetal damage during the early months of pregnancy, pregnant or possibly pregnant women should limit spa or hot tub water temperatures to 100°F(38°C).

Before entering the spa or hot tub, the user should measure the water temperature with an accurate thermometer.

The use of alcohol, drugs, or medication before or during spa or hot tub use may lead to unconsciousness with the possibility of drowning.

Persons suffering from obesity or with a medical history of heart disease, low or high blood pressure, circulatory system problems, or diabetes should consult a physician before using a spa or hot tub.

IMPORTANT SAFETY INSTRUCTIONS

Persons using medication should consult a physician before using a spa or hot tub since some medication may affect heart rate, blood pressure, and circulation.

For Cord and Plug Connected Units

Must be connected to a grounded, grounding type receptacle only. NEVER connect the spa to an extension cord.

Do not bury the cord.

For Permanently Installed Units

A terminal marked "G" or "ground" is provided in the wiring box located inside the equipment compartment. To reduce the risk of electric shock, connect the terminal or connector to the grounding terminal of your electrical service or supply panel with a continuous green insulated copper wire in accordance with National Electric Code Table 250-95 and any other local codes in effect at the time of the installation.

For Permanently Installed Units not Provided with an Internal Disconnecting Method

The electrical supply for this product must include a suitably rated switch or circuit breaker to open all ungrounded supply conductors to comply with Section 422-30 of the National Electric Code, ANSI/NFPA 70 1987. The disconnecting means must be readily accessible to the tub occupant but installed at least 5 feet (1.5m) from the tub water.

For Units with Gas Heaters

WARNING - Do not install indoors. This unit uses a gas heater that requires proper ventilation and is intended for outdoor use only.

High Voltage Warning

HIGH VOLTAGE CAN SERIOUSLY INJURE OR KILL!

ONLY EXPERIENCED TECHNICIANS SHOULD SERVICE THIS EQUIPMENT.

DO NOT remove the protective covers from any electrical enclosure, or attempt to service any related electrical device, unless you are a qualified electrician or service professional.

DANGER

Risk of electric shock. Before working with any electrical connections, make certain that the Main Power breaker from the house breaker box has been turned off.

WARNING

All electrical work must be performed by a qualified electrician and must conform to all local codes.

IMPORTANT

Due to the danger of severe electrical shock, locate all power disconnects before servicing a spa. Precautions must be taken whenever working with breaker boxes, G.F.C.I.'s, or service disconnects.

Electrical Installation

A licensed electrician must accomplish the electrical installation in accordance with the National Electric Code(NEC) Article 680, and any local codes in effect at the time of installation.

Refer to the System Data Label for equipment voltage and maximum amperage draws.

The GFCI (Ground Fault Circuit Interrupter) is a mandatory electrical safety device required for all portable spas and hot tubs as specified in the National Electrical Code Article 680-42. The GFCI in your particular installation may be installed at the electrical service panel or a separate sub-panel.

Use copper conductors ONLY. The ground must be sized following the National Electric Code, Table 250-122. For Power conductor size, refer to the National Electric Code Table 310-16.

A bonding lug has been provided on the control box to allow connection to local ground points. To reduce the risk of electrical shock, a solid copper bonding wire should be connected from this lug to any metal objects within 5 feet of the spa.

The NEC and most local codes require that a “disconnect” be installed within “line-of-site” of the spa.

Circuit & Breaker Rating	15A	20A	30A	40A	50A	60A
Maximum Amps	12A	16A	24A	32A	40A	48A
Minimum Wire Size	14	12	10	8	6	4

The above table is a wiring chart representation.

IMPORTANT- If your electrician is not absolutely sure how to connect your system correctly, call your local dealer. Any mistake may be costly and void your equipment warranty.



CAUTION: Do not connect or disconnect any components while the power is on. All connections must be done with the power off as it may cause damage to the system.



****Any resulting damages are not covered under manufacturer's warranty****



CAUTION: Damage may occur to the circuit board and spaside if the spaside plug is not properly aligned to the receptacle on the circuit board or if the spaside plug is connected or disconnected while the power is on.



****Any resulting damages are not covered under manufacturer's warranty****


Electrical Installation

OPTION 1


GFCI Installed in Main Service Panel

20-60AMP HARDWIRED


MAIN BREAKER PANEL

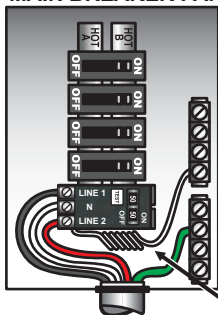

INLINE SPA DISCONNECT

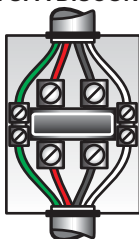

PORTABLE SPA

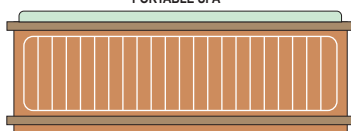

REFER TO GFCI WIRING DETAIL ON PAGE 8


Option 1 shows the power from GFCI breaker installed into main service panel to a service disconnect within line-of-site of the spa. If the manufacturer of your homes main breaker panel makes a GFCI breaker, you may be able to add it to an open slot in the panel.

OPTION 2


Subpanel GFCI Installed

20-60AMP HARDWIRED


MAIN BREAKER PANEL

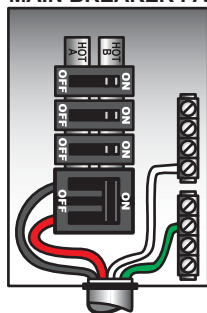

GFCI DISCONNECT

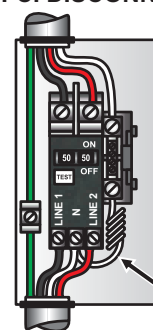

INLINE SPA DISCONNECT

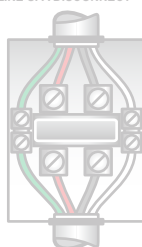

TO PORTABLE SPA



REFER TO GFCI WIRING DETAIL ON PAGE 8


Option 2 shows the power from main service panel to a GFCI subpanel within line-of-site of the spa. (Note: Most local codes will allow a GFCI subpanel to be a disconnect. If this is not the case in your installation, a disconnect must be provided.)

Electrical Installation

If your system was configured to include a 120VAC power cord, ensure that the proper receptacle has been installed (a dedicated circuit is required). **DO NOT** under any circumstances modify a 20 Amp plug to fit into a 15 Amp receptacle or use an extension cord. Doing so will create hazardous conditions and/or invalidate the warranty.

OPTION 3 Units with 15A / 20A GFCI Plug Connection

15/20AMP CORD END GFCI

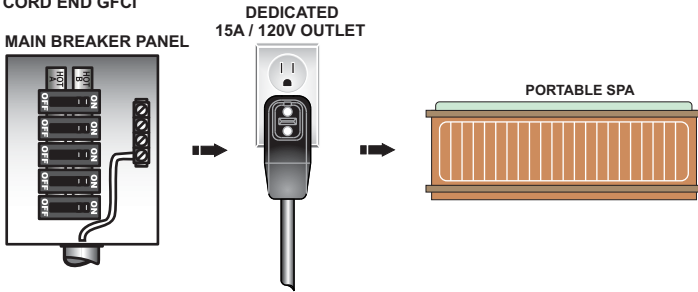


This illustration depicts a typical 15 AMP, cord-end GFCI installation.
(The spa must be installed on a dedicated circuit.)

GFCI Wiring Detail

It is important that the GFCI circuit breaker is installed correctly. Often this component has been improperly installed causing the breaker to instantly trip when the system is turned on. Below is an illustration of a typical GFCI breaker installation.

WARNING: Refer to the circuit breaker manufacturers installation instructions. This illustration is meant to be a guide for Field Technicians and is not intended to override or substitute the instructions supplied with the circuit breaker.

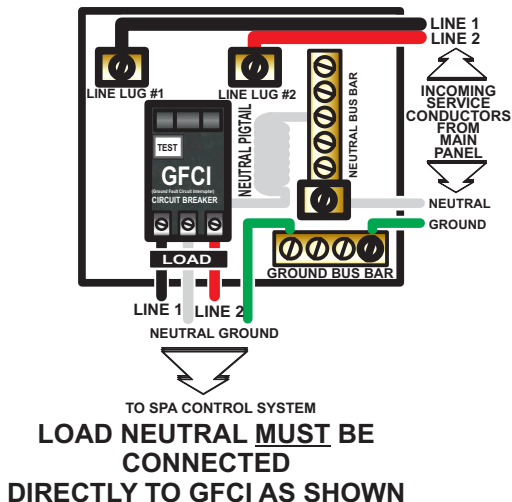

Power Connection

IMPORTANT: Always refer to the product data label (located on top of the control box) for specific electrical information.


- Use copper conductors only as required by the NEC.
- Secure wires as defined by the NEC and in compliance with any local codes in effect at the time of installation.

PUMP 1, OZONE, AND CIRC MUST ALL BE SAME VOLTAGE

THE PUMP, CIRC PUMP & OZONE ARE SET FOR 240V BY DEFAULT



240-VOLT ELECTRICAL SERVICE REQUIREMENTS

Move Dipswitch A2 & A3 to the on or up position to place the system in high amp mode. High amp mode allows the heater to stay on when high speed pump(s) or blower is turned on.

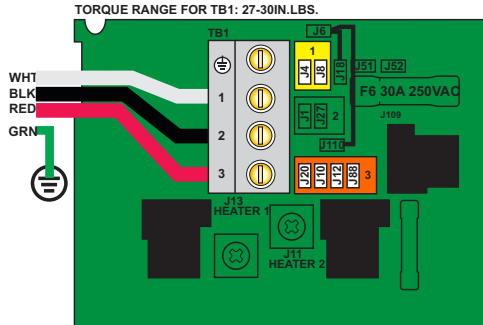


120-VOLT ELECTRICAL SERVICE REQUIREMENTS

 OPTIONAL 120VAC CONFIG FOR SETUP 3 & 4 ONLY

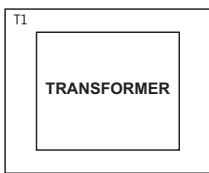

Assure DIP switches A2 & A3 are OFF or in the down position to place the system in low amp mode. Low amp mode disables the heater when high speed pump(s) or blower is turned on to prevent breaker tripping.

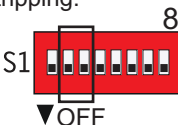


All equipment must be rated for 120VAC.

J31
J31 JUMPER MUST BE ON
1 PIN WHEN HEATER IS
CONFIGURED AS 120VAC.

WITH
GFCI
CORD,
SERVICE
IS 12A
MAX.

16A
SERVICE
REQUIRES
WALL-MOUNT 20A
GFCI / BREAKER.


WIRING SHOWN IS FOR A 120VAC-ONLY SYSTEM

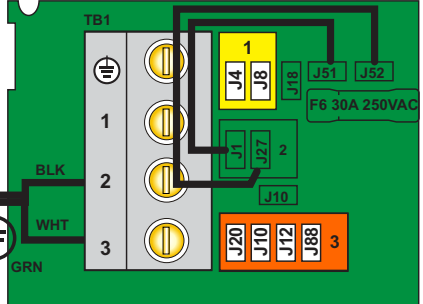

Pump Cord Connections

2-SPEED PUMP CORD CONFIGURATION

The following wiring configuration is for two-speed pump circuits.

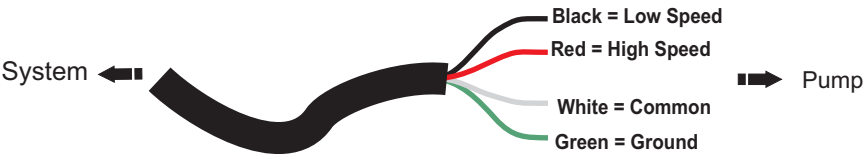

SINGLE SPEED PUMP / ACCESSORY CORD CONFIGURATION

The following wiring configuration is for single-speed pump circuits, circulation pumps, ozones, blowers and accessories.



Circuit Voltage Configurations

Default										
Input Service	Pump 1	Move White Wire	Pump 2	Move White Wire	Circ	Same as P1	Ozone	Same as P1	A/V	Move White Wire
240V	240V	NO CHANGE	240V	NO CHANGE	240V	YES	240V	YES	120V	NO CHANGE
240V	120V	J10 to J4	240V	NO CHANGE	120V	YES	120V	YES	240V	J8 to J88
240V	240V	NO CHANGE	120V	J12 to J4	240V	YES	240V	YES	120V	NO CHANGE
240V	120V	J10 to J4	120V	J12 to J8*	120V	YES	120V	YES	120V	NA**
120V	Circuits voltages change automatically with input voltage								120V	J8 to J88

* Remove White A/V wire from Area 1 (J8) to allow connection of Pump 2 circuit

** If A/V is to be used a “piggy-back” connector is required to connect to AREA 1 (Neutral Block) with another neutral wire

Note: See page 13 for circuit board diagram

SPASIDE CONTROL INSTALLATION

If required, you may have to cut out a hole in the spa shell to install spaside control.

- The mounting area must be above the maximum water level of the spa and in an area with good drainage to prevent any standing water on or around the spaside.
- The spaside should never be submerged.
- The spaside should be protected from extended periods of exposure to sunlight.
- Do not step or stand on the spaside

Step 1 - Clean area and insert spaside control. (Fig.1)

 


Fig.1

Step 3 - Remove protective film from display window then clean the face of the spaside. Now carefully align and apply the label. (Fig.3)



Overlay may vary

Fig.3

Step 2 - Remove the double sided adhesive from the back of the spaside. Make certain the spaside is straight and adhere to the spa shell. (Fig.2)

 


Fig.2

Step 4 - Connect spaside to an empty connection marked MAIN. (Fig.4)

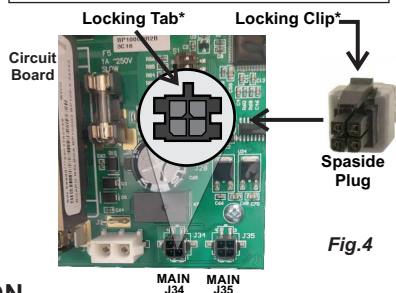


Fig.4

CONNECTING SPASIDE & EXTENSION

****Must align Locking Clip on spaside plug with Locking Tab on circuit board for proper function.***

When utilizing a spaside extension cord, the clip and tab must also be aligned at all connections. Fig.5

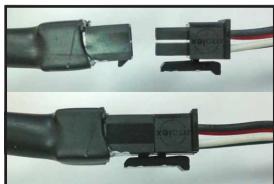


Fig.5

Cord plugs are labeled to insure proper plug alignment as shown in Fig.6

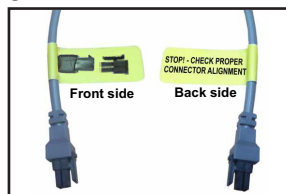


Fig.6

CAUTION: Damage may occur to the circuit board and spaside if the spaside plug is not properly aligned to the receptacle on the circuit board or if the spaside plug is connected or disconnected while the power is on.


*****Any resulting damages are not covered under manufacturer's warranty*****

WIFI (CMS) MODULE INSTALLATION KIT (OPTIONAL)

Your new system has the capability to connect with the internet using ControlMySpa.

If Provided with your system, please make sure to install the module following these few steps:

Step 1 - Connect CMS module cable into an empty connection marked "Main"

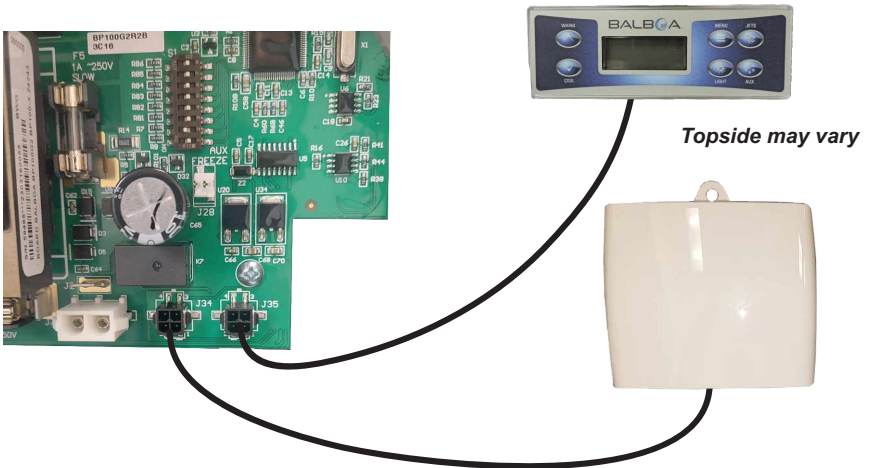


* If no main connections are available, you may use the "Y" cable provided with the wi-fi module kit (34-59303-K)

Step 2 - You may mount the CMS module inside the lower control system enclosure.

Step 3 - Please follow the instructions provided with the wifi CMS module kit to properly install your ControlMySpa™ App


Note: If you experience poor operation via the CMS module, it may be necessary to relocate the module closer to your wifi router.

Circuit Board Configurations

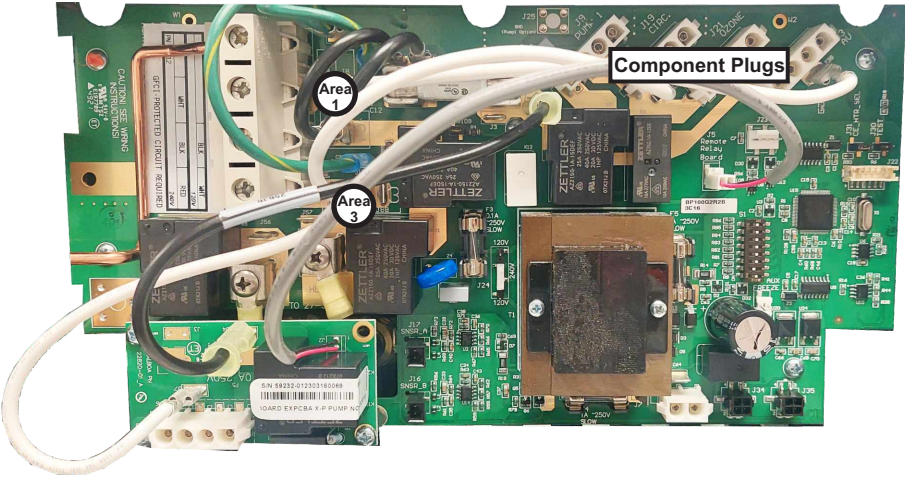

Component Voltage Configurations

Component outputs are pre-configured for 240. If 120V output is required, please utilize the illustration below and the wiring diagram on page #14 to convert the required circuit.

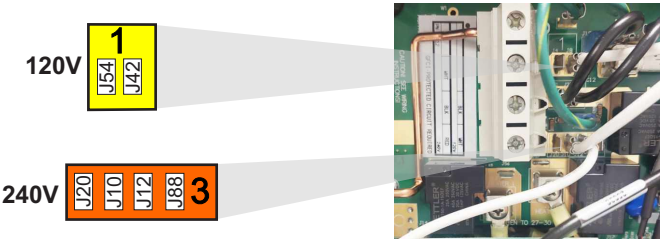

Voltage Selection Chart for 120V Conversion

Component	Volts	Amps	From	To
P1 2-spd	240V	12A	Area 3	Area 1
P2 or Blower	240V	12A	Area 3	Area 1
Circ Pump	240V	2A	Area 3	Area 1
AV	240V	2A	Area 3	Area 1
Ozone	240V	.5A	Area 3	Area 1

**IMPORTANT NOTE - PUMP 1, OZONE & CIRC PUMP
MUST BE SAME VOLTAGE RATING**

Heater Configurations

Your system may be provided with 1 of 3 different heater styles and there are specific considerations to each style.


Fixed Heater

Standard heater placement for typical spa system installations. Usually is combined with a 2-Speed system pump or a high flow circulation pump. Please be advised that this style of heater requires a minimum of 22-25 GPM for proper operation and that the water flow can go in either direction. It is recommended that the fixed heater style unit be mounted firmly to the base platform of the spa equipment mounting area.



Remote Heater

Remote heater placement for spas that typically need the flexibility to mount the heater in a different orientation or location. This style of heater is usually combined with a 2-Speed system pump or a high flow circulation pump. Please be advised that this style of heater requires a minimum of 22-25 GPM for proper operation and that the water flow can go in either direction.. The heater may be located and orientated as best suits the available space with the equipment mounting area.

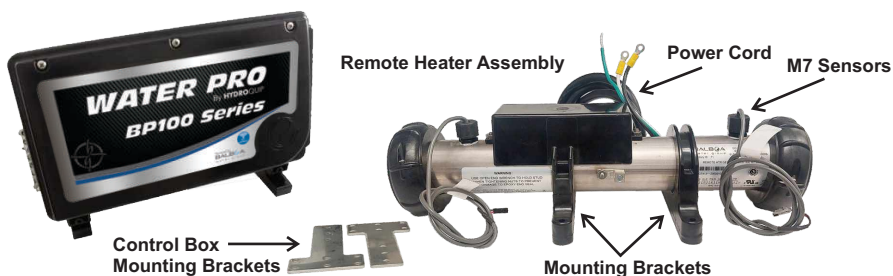

Heater Configurations

LOW FLOW HEATER


The Low Flow heater is for spas that originally were designed for a low flow heater and utilize a small circulation pump with much smaller plumbing, typically of clear vinyl tubing.. typically need the flexibility to mount the heater in a different orientation or location. Please be advised that this style of heater requires a minimum of 10-15 GPM for proper operation and that the water flow must enter into the lower port and exit the upper port. The heater may be located as best suits the available space with the equipment mounting area.

It is highly recommended to install a new filter cartridge and verify the output of your current low flow circulating pump to achieve optimal performance.


Pumps NOT acceptable: Laing/Xylem E3, E5 or E14 series, after-market submersible fountain or pond pumps.

Acceptable pumps: Laing/Xylem E10, Grundfos 43SPA and RUES series, LX WE10 series.


Contact your supplier for a recommendation if you're not certain of your pumps performance or to purchase one of the approved models. Note that the Low Flow system will exhibit FLO errors in the topside display if the pump performance is too low or if the filter is dirty.

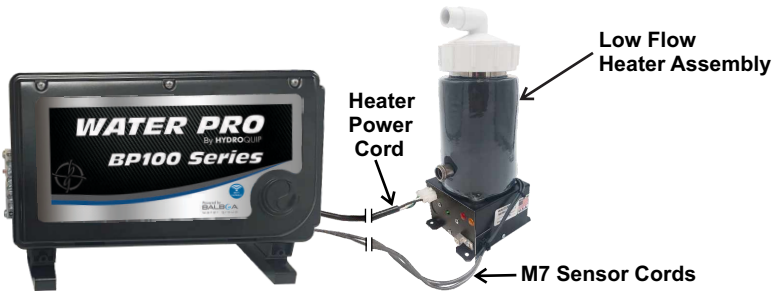

Connect Heater Power Cord to the heater

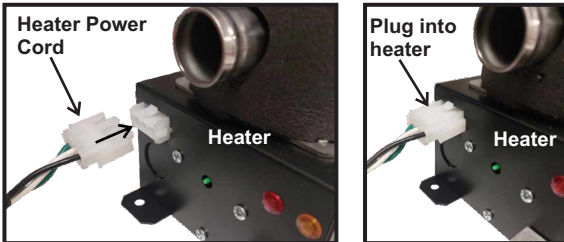

Connect M7 sensors to circuit board on J16 & J17

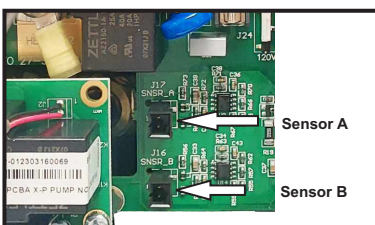


TP (MAIN) PANELS
J34 OR J35

BP100G2 PN 59267

CONNECT ONLY TO CIRCUITS PROTECTED BY A CLASS A GFCI.
A DISCONNECTING MEANS MUST BE INSTALLED WITHIN SIGHT FROM
THE EQUIPMENT AND AT LEAST 5 FEET (1.52 M) FROM THE
INSIDE WALLS OF THE POOL, SPA, OR HOT TUB.

TORQUE RANGE
FOR TB1: 27-30 IN. LBS.

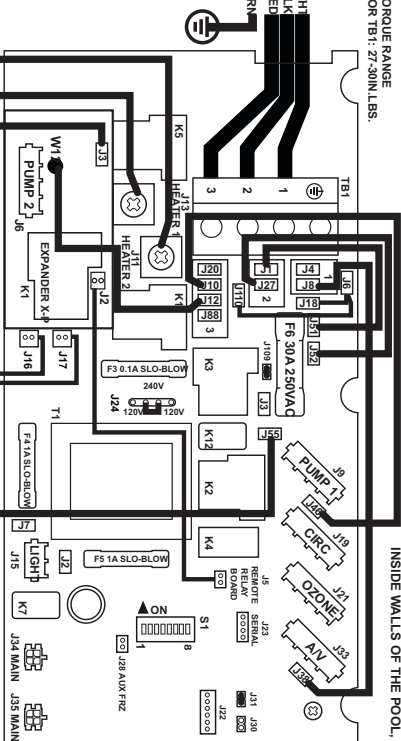

TORQUE RANGE FOR HEATER
CONNECTIONS: 30 TO 35
IN. LBS.

EXPANDER X-P

LOCATION	PUMP	VOLTS	AMPS	FROM	TO	FROM	TO
J6	PUMP 2	240V	12A	W12	AREA 3	J3	J55

USE COPPER CONDUCTORS ONLY.
EMPLOYER UNIFORM
DES CONDUCTEURS DE CUIVRE.
#6 AWG MIN. WIRE= 90°
FOR SUPPLY CONNECTIONS,
USE CONDUCTORS SIZED ON THE
BASIS OF 60°C AMPACITY BUT
RATED MINIMUM OF 90°C.

TOTAL OUTPUT AMP DRAW NOT TO
EXCEED MAX INPUT RATING OF SPA
USE EARTH GROUND CONNECTIONS
AS INDICATED INSIDE SYSTEM ENCLOSURE

INSTEAD OF
SETUP #2,
THIS SYSTEM IS
CONFIGURED IN
SETUP #1:



SET	CIRC PUMP	PUMP 1	PUMP TEMP SCALE
1	FILTERS + POLLIN	1-SPEED	1-SPEED
2	NONE	2-SPEED	1-SPEED
3	FILTERS + POLLING	1-SPEED	NONE
4	NONE	2-SPEED	NONE

LOCATION	DEVICE	VOLTS	MAX AMP	FROM	TO
J9	21-SP PUMP 1	120V	12A MAX	J46	AREA 3
J21	CIRC PUMP	240V	12A MAX	J46	AREA 3
J22	OZONE	120V	0.5A	J51, J52	AREA 2
J33	CIRC AND OZONE LINE CONNECTION	120V	3A	J35	AREA 1
J35	TV / AV	120V	1A	J35	AREA 1
J11 & J13	HEATER	240V	5.5 KW	J11 & J13	AREA 1

*PUMP 1, CIRC AND OZONE ALL MUST BE THE SAME VOLTAGE.

WIFI
TRANSCIVER
J34 OR J35

NOTE: SWITCH A7 SHOULD BE
OFF IF USING WIFI. SINCE
WIFI DOESN'T SUPPORT
SIMPLIFIED MENUS.

ON POSITION	S1 SWITCH #	OFF POSITION
TBD	8	TBD
SIMPLIFIED MENUS	7	STANDARD MENUS
MEMORY RESET	6	STORE SETTINGS
SPECIAL AMPERAGE RULE ON	5	SPECIAL AMPERAGE RULE OFF
5 MIN HTR COOLDOWN (GAS)	4	1 MIN HTR COOLDOWN (ELEC)
ADD 2 HS PUMPS WITH HEAT	3	DON'T ADD 2 HS PUMPS WITH
ADD 1 HS PUMP WITH HEAT	2	DON'T ADD 1 HS PUMP WITH
TEST MODE ON	1	TEST MODE OFF

*SWITCH # 6 SHOULD BE SET TO OFF UPON FINAL INSTALLATION.
ALL UNUSED SWITCHES SHOULD BE OFF.

OPTIONAL 120VAC CONFIG FOR SETUP 3 & 4 ONLY

J24 JUMPER MUST BE IN
POSITION AS SHOWN
WITH 120VAC.




J31 JUMPER MUST BE ON
J31 WHEN HEATER IS
CONFIGURED AS 120VAC.

NOTE: SWITCH A7 MUST BE OFF WHEN USING GRAPHIC
PANELS (TP900, TP900L, OR SPATOUCH FAMILY).

WIRING SHOWN IS FOR A 120VAC-ONLY SYSTEM
(1.25KW @ 120VAC HEATER)

FOR A 240V HEATER, MAKE THE FOLLOWING CHANGES:
1. J17 MUST BE WIRED WH1-1, BLK-2, RED-3
2. MOVE J46 AND J35 WIRES FROM AREA 3 TO AREA 1
3. J24 JUMPER MUST BE ON 2 PINS
4. PUT J31 JUMPER ON 2 PINS

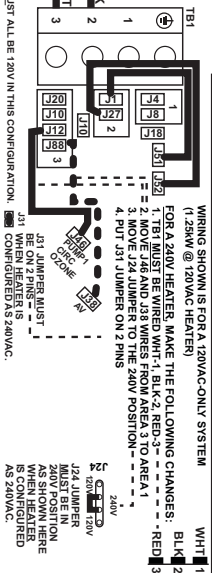

J31 JUMPER MUST BE ON 2 PINS
J31 WHEN HEATER IS
CONFIGURED AS 240VAC.

BP100 CIRCUIT BOARD SETUP NUMBERS

The Setup number designates the specific hardware configuration of the connected components, such as the number of pumps, their speeds (1-speed or 2-speed), and whether a blower, circulation pump, or other accessories are installed.

Setup Reference Table for Setups 1-4

(High and Low Speed Pump Systems)

Primary Heating/Filtration Pump	PUMP 1	PUMP 2	BLOWER	SETUP #
2-Speed Primary Pump	2-SPEED	1 SPEED	-----	2
2-Speed Primary Pump	2-SPEED	-----	1-SPEED	4

(8-60 GPM Circulation Pump Systems)

Primary Heating/Filtration Pump	PUMP 1	PUMP 2	BLOWER	SETUP #
Circulation Pump 8-60 GPM	1 SPEED	1 SPEED	-----	1
Circulation Pump 8-60 GPM	1 SPEED	-----	1-SPEED	3

 
PROGRAMMING THE SETUP NUMBER

TP200, TP400, TP600 Series Spasides


Look at the **Setup chart on pages 17** to find the option that matches your spa's pump setup.

Once you've found the right Setup number, switch the system into **TEST** mode to start programming.

With power turned on, locate the S1 Dip Switch and move switch 1 to the ON (UP) position.



 As soon as Switch #1 is placed in the ON position, the temperature on the display of the spaside will show a "T" instead of F or C, indicating it is in **TEST** mode.




The "T" confirms the system is in **TEST** mode

At this time, you will have 1 minute to complete the procedure below before the pump turns on to start running internal diagnostics.

If you do not complete the Setup within the 1 minute time, just push the TEMP button again to restart the 1 minute.

Proceed as follows:

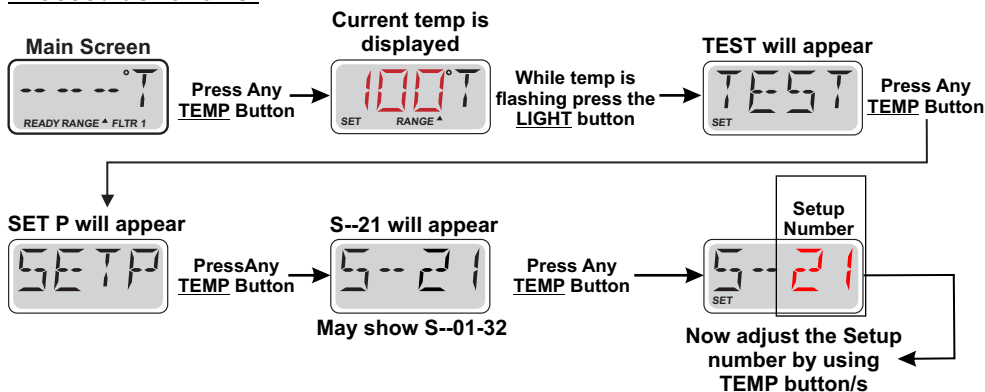

Using the Temperature Buttons

If your spaside control has **ONE** button Press and release to change direction. Hold the button to scroll.

If your spaside control has **TWO** buttons Press UP or DOWN to change the number.

Once the SetUp number has been chosen, press the **LIGHT** button to lock the choice and the system will reset.

Dip switch #1 can now be set to the OFF (Down) position.

 
PROGRAMMING THE SETUP NUMBER

TP500 Series Spasides


Look at the **Setup chart on pages 17** to find the option that matches your spa's pump setup.

Once you've found the right Setup number, switch the system into **TEST** mode to start programming.

With power turned on, locate the S1 Dip Switch and move switch 1 to the ON (UP) position.



 As soon as Switch #1 is placed in the ON position, the temperature on the display of the spaside will show a "T" instead of F or C, indicating it is in **TEST** mode.




The "T" confirms the system is in TEST mode

At this time, you will have 1 minute to complete the procedure below before the pump turns on to start running internal diagnostics.

If you do not complete the Setup within the 1 minute time, just push the TEMP button again to restart the 1 minute.

Proceed as follows:

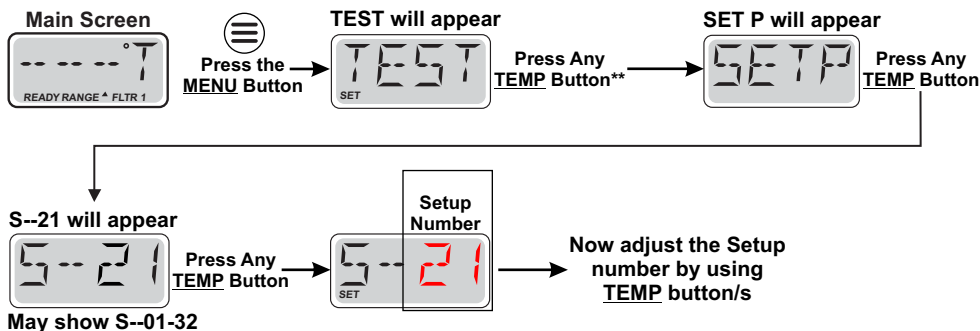

Using the Temperature Buttons

If your spaside control has ONE button Press and release to change direction. Hold the button to scroll.

If your spaside control has TWO buttons Press UP or DOWN to change the number.

Once the SetUp number has been chosen, press the LIGHT button to lock the choice and the system will reset.

Dip switch #1 can now be set to the OFF (Down) position.

 
PROGRAMMING THE SETUP NUMBER

TP700 Series Spaside

Look at the **Setup chart on pages 17** to find the option that matches your spa's pump setup.

Once you've found the right Setup number, switch the system into **TEST** mode to start programming.


With power turned on, locate the S1 Dip Switch and move switch 1 to the ON (UP) position.



At this time, you will have 1 minute to complete the procedure below before the pump turns on to start running internal diagnostics.

If you do not complete the Setup within the 1 minute time, just push the TEMP button again to restart the 1 minute.

Proceed as follows:

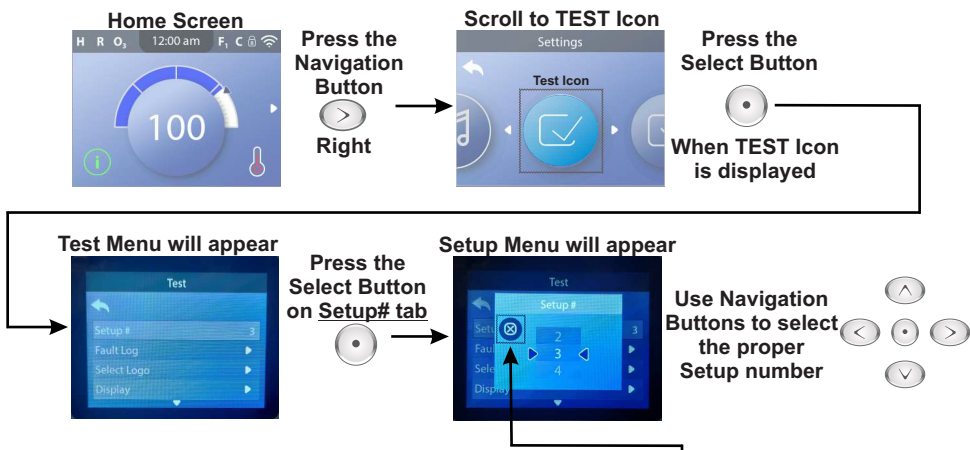

Once the Setup number has been chosen, highlight the  button and press the Select button to lock the choice and the system will reset.

Dip switch #1 can now be set to the OFF (Down) position.

 
PROGRAMMING THE SETUP NUMBER

TP800, TP900 Series Spasides

Look at the **Setup chart on pages 17** to find the option that matches your spa's pump setup.

Once you've found the right Setup number, switch the system into **TEST** mode to start programming.

With power turned on, locate the S1 Dip Switch and move switch 1 to the ON (UP) position.




At this time, you will have 1 minute to complete the procedure below before the pump turns on to start running internal diagnostics.

If you do not complete the Setup within the 1 minute time, just push the TEMP button again to restart the 1 minute.

Proceed as follows:

As soon as Switch #1 is placed in the ON position, TEST will appear on display

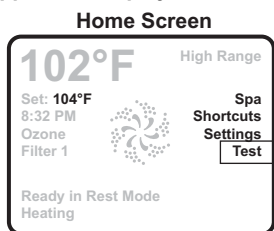


Press the Select Button




On the TEST tab

Change Setup # to correct setting using the Navigation buttons.

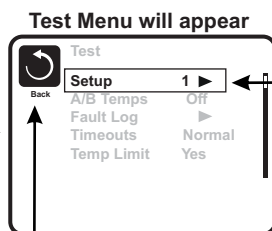

Navigation buttons

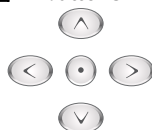

Once the Setup number has been chosen, highlight the  button and press the Select button to lock the choice and the system will reset.

Dip switch #1 can now be set to the OFF (Down) position.

 
PROGRAMMING THE SETUP NUMBER

Spatouch 1 & 2 Series Spasides

Look at the **Setup chart on pages 17** to find the option that matches your spa's pump setup.

Once you've found the right Setup number, switch the system into **TEST** mode to start programming.


With power turned on, locate the S1 Dip Switch and move switch 1 to the ON (UP) position.



At this time, you will have 1 minute to complete the procedure below before the pump turns on to start running internal diagnostics.

If you do not complete the Setup within the 1 minute time, just push the TEMP button again to restart the 1 minute.

Proceed as follows(Touch Screen):

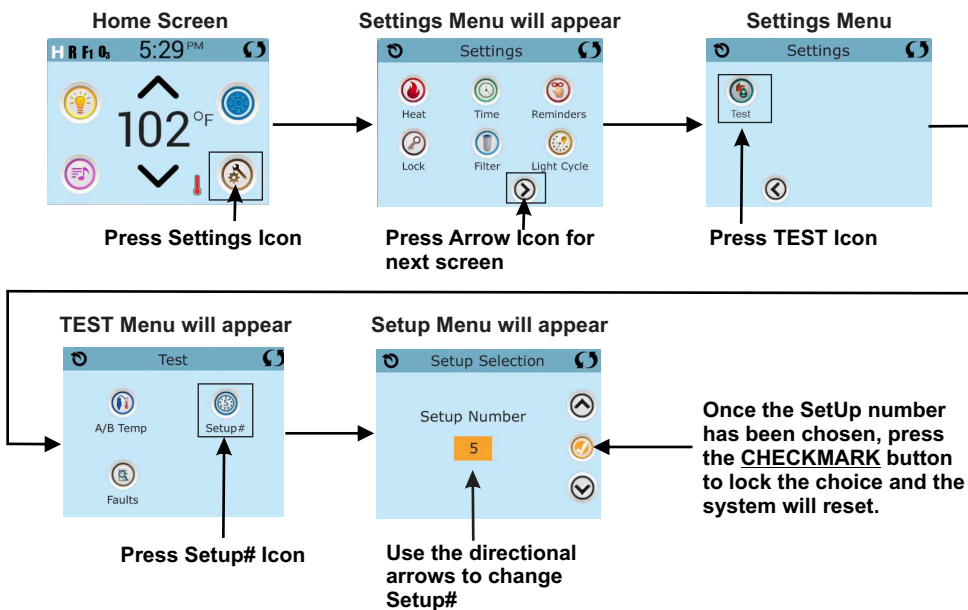

Dip switch #1 can now be set to the OFF (Down) position.

 
PROGRAMMING THE SETUP NUMBER

Spatouch 3, 3+, 4, 4+ Series Spasides

Look at the **Setup chart on pages 17** to find the option that matches your spa's pump setup.

Once you've found the right Setup number, switch the system into **TEST** mode to start programming.

With power turned on, locate the S1 Dip Switch and move switch 1 to the ON (UP) position.




At this time, you will have 1 minute to complete the procedure below before the pump turns on to start running internal diagnostics.

If you do not complete the Setup within the 1 minute time, just push the TEMP button again to restart the 1 minute.

Proceed as follows(Touch Screen):

Home Screen

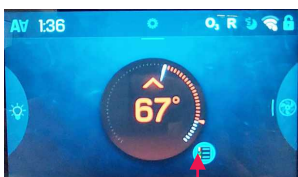

Press Menu Icon

Test Mode Menu will appear



Press the down arrow to reveal Setup Menu

Setup numbers will appear



Choose the correct Setup number and once the number is pressed, the system will restart

Dip switch #1 can now be set to the OFF (Down) position.

 
PROGRAMMING THE SETUP NUMBER

Spatouch Mini Series Spaside

Look at the **Setup chart on pages 17** to find the option that matches your spa's pump setup.

Once you've found the right Setup number, switch the system into **TEST** mode to start programming.


With power turned on, locate the S1 Dip Switch and move switch 1 to the ON (UP) position.



At this time, you will have 1 minute to complete the procedure below before the pump turns on to start running internal diagnostics.

If you do not complete the Setup within the 1 minute time, just push the TEMP button again to restart the 1 minute.

Proceed as follows(Touch Screen):

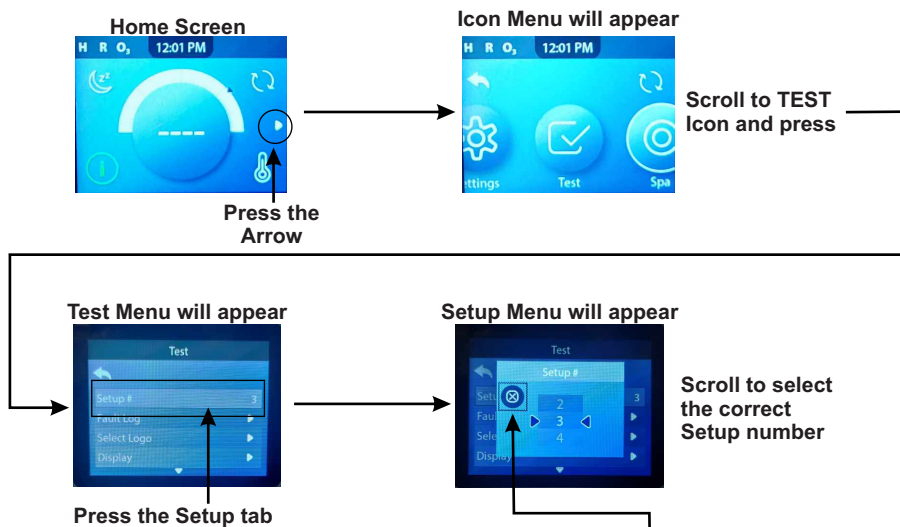

Once the Setup number has been chosen, highlight the  button and press the Select button to lock the choice and the system will reset.

Dip switch #1 can now be set to the OFF (Down) position.

System Start-Up

Preparation and Filling

Fill the spa to its correct operating level. Be sure to open all valves and jets in the plumbing system before filling to allow as much air as possible to escape from the plumbing and the control system during the filling process.

After turning the power on at the main power panel, the top-side panel display will go through specific sequences. These sequences are normal and display a variety of information regarding the configuration of the hot tub control.

Priming Mode

This mode will last for 4-5 minutes or you can manually exit the priming mode after the pump(s) have primed.

Regardless of whether the priming mode ends automatically or you manually exit the priming mode, the system will automatically return to normal heating and filtering at the end of the priming mode. During the priming mode, the heater is disabled to allow the priming process to be completed without the possibility of energizing the heater under low-flow or no-flow conditions. Nothing comes on automatically, but the pump(s) can be energized by pushing the "Jet" buttons. If the spa has a Circ Pump, it can be activated by pressing the "Light" button during Priming Mode.

Priming the Pumps

As soon as the priming mode has started, push the "Jet" button once to start Pump 1 in low-speed and then again to switch to high-speed. Also, push the Pump 2 or "Aux" button, if you have a 2nd pump, to turn it on. The pumps will now be running in high-speed to facilitate priming. If the pumps have not primed after 2 minutes, and water is not flowing from the jets in the spa, do not allow the pumps to continue to run. Turn off the pumps and repeat the process. Note: Turning the power off and back on again will initiate a new pump priming session. Sometimes momentarily turning the pump off and on will help it to prime. Do not do this more than 5 times. If the pump(s) will not prime, shut off the power to the spa and call for service.

Important: A pump should not be allowed to run without priming for more than 2 minutes. Under NO circumstances should a pump be allowed to run without priming beyond the end of the 4-5 minute priming mode. Doing so may cause damage to the pump and cause the system to energize the heater and go into an overheat condition.

Priming Mode

You can manually exit Priming Mode by pressing a "Temp" button (Up or Down). Note that if you do not manually exit the priming mode as described above, the priming mode will be automatically terminated after 4-5 minutes. Be sure that the pump(s) have been primed by this time.

Once the system has exited Priming Mode, the top-side panel will momentarily display the set temperature but the display will not show the temperature yet, as shown below. This is because the system requires approximately 1 minute of water flowing through the heater to determine the water temperature and display it.

Operation Considerations

The following describes situations you may encounter and situations to be aware of.

Warm Weather Conditions

Since your spa will normally be expected to maintain warm to hot water ready for use, a great deal of attention has been directed to the energy conservation detail of insulation to keep electrical cost down. Energy conservation efficiency may be achieved by extensive insulation of the spa cabinet, plumbing, spa shell and in some climates full foam insulation may have been provided. This energy conservation feature may cause an inconvenience during warmer times of the year. During warm periods of the year, the temperature within the equipment compartment can elevate to a point that the pump will automatically turn off for a short amount of time (15-30 minutes) to allow the pump to cool down before automatically restarting. This cool down feature will not harm your spa, but serves only to protect the pump from damage as an indicator that it is too hot. To minimize this occurrence, refrain from using your Hydrotherapy Jets for prolonged periods of time during warm seasons. The jet pump chosen for your spa has been specifically sized for maximum performance and your Hydrotherapy enjoyment.

Filtration System

Please refer to your Spa Manufacturer's Owner's Manual regarding the operation, maintenance and cleaning of your filtration system.

IMPORTANT - Heater pump must provide a minimum flow of 23 GPM through heater.

Winterizing

When freezing weather and/or power losses are expected, contact your local spa dealer for freeze protection or winterizing recommendations for both the spa and the equipment system. Freeze related damage is not covered by the warranty.

Chemical Water Treatment

Your dealer is familiar with local water conditions and which chemicals are compatible with and designed specifically for your spa. This is the best person to advise you on proper water quality management. The one thing you can do to insure years of trouble free equipment operations is to maintain proper water chemistry.

Two basic goals of the chemical water treatment are sanitizing and balancing the water. Sanitizing simply means keeping the water free from microorganisms including algae, bacteria and viruses. The current most popular chemicals for sanitizing include chlorine, bromine and ozone.

Balancing water means establishing a balance among pH, total alkalinity and total hardness. Water that is unbalanced can corrode the spa and its support equipment or leave deposits of minerals. Properly balanced water is essential to allow the sanitizing chemical to work effectively. There are numerous chemical additives to help you in controlling pH, total hardness and alkalinity. Never use softened water when filling your spa. Softened water is extremely corrosive to the metal parts of the spa equipment and may lead to an unforeseen failure. Sometimes, despite your most diligent efforts, your water may become out of balance to be managed chemically. At this point it is probably better to drain and clean the spa and start over with fresh water. Equipment failure caused by improper water chemistry will not be covered under warranty. Saltwater purification systems can potentially damage your equipment. Any related failures will not be covered under warranty.

System Functions / Features

Spaside Control



Pump 1 Key: Pressing this key when the pump is OFF will turn it ON to Low Speed, a second press switches the pump to High speed, a third press turns the pump OFF. If the pump is ON from manual activation, the pump low speed will time out after 30 minutes and the high speed will time out after 15 minutes. If the pump cannot be turned OFF a filter cycle is active.



Pump 2 / Blower: Press this key to turn the blower ON and OFF. An automatic timer will turn the blower off after 15 minutes of operation.



Light Key: Press this key to turn the light ON and OFF. An automatic timer will turn the light off after 4 hours of operation. The Light indicator will illuminate when it is active.



Temperature Set Keys: Press the “Cool/Down” button or “Warm/Up” button to display the current set water temperature. Pressing either button while the set temperature is displayed will increase or decrease the set temperature by 1°F. The temperature is adjustable between 80°F - 104°F / 26°C - 40°C or 50°F - 99°F / 10°C - 37°C. See Dual Temp Range page 19

Filtration and Ozone**

On non-circ systems, Pump 1 low and the ozone generator will run during filtration. On circ systems, the ozone will run with the circ pump.

The system is factory-programmed with one filter cycle that will run in the evening (assuming the time-of day is properly set) when energy rates are often lower. The filter time and duration are programmable. A second filter cycle can be enabled as needed.

At the start of each filter cycle, the blower (if there is one) or Pump 2 (if there is one) will run briefly to purge its plumbing to maintain good water quality.

Freeze Protection

If the temperature sensors within the heater detect a low enough temperature (44°F), then the pump(s) and blower automatically activate to provide freeze protection. The pump(s) and blower will run either continuously or periodically depending on conditions.

**See provided Spaside Control Operation Guide for programming procedures.

System Functions / Features

Dual Temperature Ranges**

This system incorporates two temperature range settings with independent set temperatures. The High Range designated in the display by an “up” arrow or “High Range”, and the Low Range designated in the display by a “down” arrow or “Low Range”.

These ranges can be used for various reasons, with a common use being a “ready to use” setting vs. a “vacation” setting. The Ranges are chosen using the menu structure. Each range maintains its own set temperature as programmed by the user. This way, when a range is chosen, the spa will heat to the set temperature associated with that range.

High Range may be set between 80°F and 104°F

Low Range may be set between 50°F and 99°F

Freeze Protection is active in either range

Mode – Ready and Rest**

In order for the spa to heat, a pump needs to circulate water through the heater. The pump that performs this function is known as the “heater pump.”

READY MODE - Will circulate water every 1/2 hour, using Pump1 Low, in order to maintain a constant water temperature, heat as needed, and refresh the temperature display. This is known as “polling.” “Ready” will be displayed.

REST MODE - Will only allow heating during programmed filter cycles. The temperature display may not show a current temperature until the heater pump had been running for a minute or two. “REST” will be displayed.

READY-IN-REST MODE - Appears in the display if the spa is in Rest Mode and Jet 1 is pressed. It is assumed that the spa is being used and will heat to set temperature. While Pump 1 High can be turned ON and OFF, Pump 1 Low will run until set temperature is reached, or 1 hour has passed. After 1 hour, the system will revert to Rest Mode. This mode can also be reset by entering the Mode Menu and changing the Mode.

Time of Day**

Setting the time-of-day can be important in determining filtration times and other background features.


NOTE:

If power is interrupted to the system, Time-of-Day is not stored. The system will still operate and all other user settings will be stored. If filtered cycles are required to run at a particular time of day, resetting the clock will return the filter times to the actual programmed periods.

****See provided Spaside Control Operation Guide for programming procedures.**

System Plug Pinouts


Note flat sides in connector

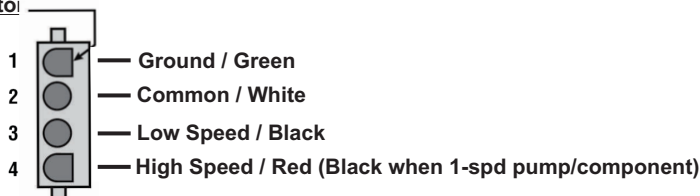

Testing / Replacing the Sensor Set

IMPORTANT: For the following set of instruction, the power must be off when plugging in or unplugging sensors.

- 1) Check sensor wires for cracks or damage that may indicate the presence of a rodent.
- 2) Inspect connections of both sensors on the circuit board. The plugs must be clean.
- 3) If the spa side has the error message of Sa or Sb, this is an indication of a faulty sensor or possibly a faulty circuit board.
- 4) With the power off to the spa, unplug the two sensors from the circuit board and exchange their positions (i.e., plug the one that was in the “Sen. A jack into the “Sen. B jack and vice versa).
- 5) Power up the spa, if the error message did not change (i.g. original error message was Sa and still displays Sa) this is an indication of a faulty circuit board. If the error message changed (i.g., original error message was Sa and now displays Sb) replace the sensor in the corresponding plug on the circuit board.
- 6) When replacing sensors, please keep in mind that the heater assembly will contain water pressure even with the spa’s power off. Close available slice valves and proceed with caution not to allow water on the surrounding electronics.

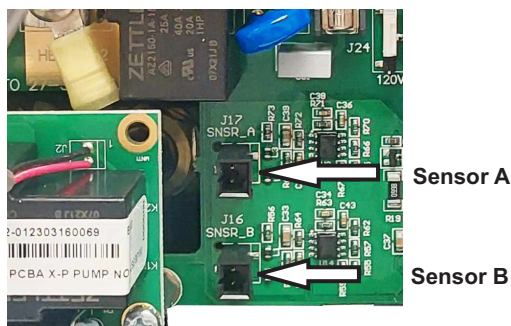

Troubleshooting

The following describes situations and possible solutions to common problems you may encounter as a spa owner.

Nothing Operates

- Main Breaker is OFF - *Set to On.*
- Sub-Panel Breaker Off - *Set to On.*
- Equipment GFCI Off - *Set to On.*
- Power switch in Off position - *Set to On.*
- Components not plugged in - *Plug in components.*
- Power cord not plugged in - *Plug in power cord.*
- Over or High Temperature Protection On - *Refer to Spa Side Messages.*

No, Low or Surging Water Flow

- Air Lock in Plumbing System - *"Bleed" the system.*
- Restricted Flow - *Insure that the water shut-off valves are open and that suction fittings are not blocked by debris.*
- Dirty Filter - *Clean or replace filter.*
- Low Water Level - *Increase water level to recommended level.*

Low Speed Pump Not Operational

- Circuit board configuration is Incorrect - *Contact your local dealer.*
- Pump Not Plugged-In - *Plug in the Pump.*
- Blown Fuse - *Contact your local dealer.*

Jets or Blower Not Operational

- Blower or Pump Not Plugged-In - *Plug in the Blower or Pump.*
- Blown Fuse - *Contact your local dealer.*
- Over or High Temperature Protection On - *Refer to Spa Side Messages.*

Therapy Jet Not Operational

- Water Shut-Off Valves are Closed - *Open Shut-Off valves.*
- Dirty Filter - *Clean or replace filter.*
- Jets Not Properly Adjusted - *Adjust Jets properly.*
- Diverter Valve Not Properly Adjusted - *Adjust diverter valve properly.*
- Thermal Overload Tripping - *Check for restricted flow of water.*

Water Leaks

- Spa Overfilled - *Adjust water level.*
- Too Many People in the Spa - *Adjust water level.*
- Drain-Valve Left Open - *Close drain valve.*
- Couplings or Unions Loose - *Tighten or contact your local dealer.*
- Pump Seal Leaking - *Contact your local dealer.*
- Plumbing / Connections Leaking - *Contact your local dealer.*
- Water Leaking from Spaside Control - *Contact your local dealer.*
- Water in Air Blower Plumbing - *Contact your local dealer.*

No Heat

Temperature Not Set Correctly - *Adjust Set Point.*

Over or High Temperature Protection On - *Refer to Spa Side Messages*

Current Limiting On - *120V Systems will not heat if High Speed or Blower is on. Contact your local dealer.*

No Power - *Reset breaker at service panel.*

Low Water Flow - *Clean or Replace filter.*

System is in Rest Mode - *Refer to Modes on page 19.*

Light Not Operation

Light Bulb Defective - *Replace bulb or contact your local dealer.*

Reflector has Fallen Off - *Replace deflector or contact your local dealer.*

Light Not Plugged-In - *Plug in the Light.*

High Heat

Filter Cycles Running Too Long - *Adjust filter cycles down.*

Temperature Set Too High - *Adjust Set Point.*

High Ambient Temperature - *Remove spa cover.*

GFCI Breaker Trips Occasionally

Lightning / Electrical Storm or Power Surge - *Reset GFCI Breaker.*

NOTE: The GFCI breaker must be properly installed by a licensed electrician.

GFCI Breaker Trips Immediately

Defective Component or Improper GFCI Breaker Installation - *Contact a qualified service technician or the factory for assistance.*

System Data Label

Note: This information will be necessary if you should ever have to request warranty or any other type of service.

The system data label is located on the control box. This label is very important and contains information you will need to establish your electrical service. The voltage and amperage ratings are shown on the bottom of the label. Product, Model, Serial and Code numbers are also shown on the label.

 HYDROQUIP THE SMART CHOICE™ Corona, CA 92880 www.hydroquip.com	ORDER CODE XXXXXXX-XXXXXX
	PRODUCT: XXXXXXX-XXXXXX
SAMPLE	SERIAL: XXXX-XXXX-XXX
	CODE: XXXXX-XXXX-XX
	VOLTS: XXX / XXX
	AMPS: XX / XX
	MODEL: HQXXXX

Warranty Information

Hydro-Quip warrants its products to the original purchaser to be free from defects in material and workmanship for a period of 1 year (12 months) from the original date of purchase, except as noted below.

Products which become defective within the warranty period will be repaired or replaced (at the option of Hydro-Quip) except for damage due to freezing, water chemistry, negligence, abuse, misuse, misapplication, unauthorized modification, improper installation, normal wear and tear or chemical attack.

This warranty extends only to normal, personal (non-commercial) usage by the original purchaser. Pump seals, o-rings, gaskets, air blower brushes are only covered for 90 days from original date of purchase.

Hydro-Quip will not be responsible for labor incurred in removing, inspecting or reinstalling of warrantable products. Hydro-Quip will not be responsible for any travel related charges or labor costs attributable to disassembly and reassembly of the spa, skirt, decking or any other materials enclosing the product, or attributable to difficulties in gaining access to the product.

Hydro-Quip will not be responsible for labor incurred for routine maintenance, adjustments or alterations to the calibration of electrical devices.

Any products which are claimed to be defective must be shipped freight prepaid to Hydro-Quip and the repaired or replaced product will be returned to the sender freight collect. When sent to Hydro-Quip, the product must be accompanied by the sales receipt or other proof of the purchase date as well as the sender's name, mailing address, daytime phone number and a detailed description of the defect as well as any other information relating to this claim.

Unless state law expressly provides otherwise, Hydro-Quip will only be responsible for repair or replacement of any of its products that are found to be defective as provided above, and will not bear the cost of any consequential damages. This warranty gives you specific legal rights but you may have other rights which vary from state to state.

NOTES:

BP Platform Upgrades and Products Available

Water Pro Ozonators



UV Sanitizers



Spa Touch (touch screen) Spaside Controls



Spa Touch™ 2



Spa Touch™ mini



Spa Touch™ 3



Spa Touch™ 4



Spa Touch™ 4+

Control My Spa Wi-Fi Kit



Water Pro LED Lighting



Water Pro BP100 Series Retro-Kits*



Low Flow Heater Series



Remote Heater Series



Fixed Heater Series

*BP7 Series Available also

For more information on these products and many more, go to:

www.hydroquip.com



HYDROQUIPTM
THE SMART CHOICETM

510A N. Sheridan St - Corona, CA 92878

PH: 951-273-7575 - Fax: 951-273-7550

www.hydroquip.com